

# NQ-RMK04



# BOGEN®

## Nyquist Appliance Joining Bracket Kit


### INSTALLATION GUIDE

#### JOINING BRACKET KIT INCLUDED ITEMS:

- A1:** Left Unit Side Bracket, three (3) M3 sheet metal screws
- A2:** Right Unit Side Bracket, three (3) M3 sheet metal screws
- B:** Support Bracket, four (4) M4 machine screws

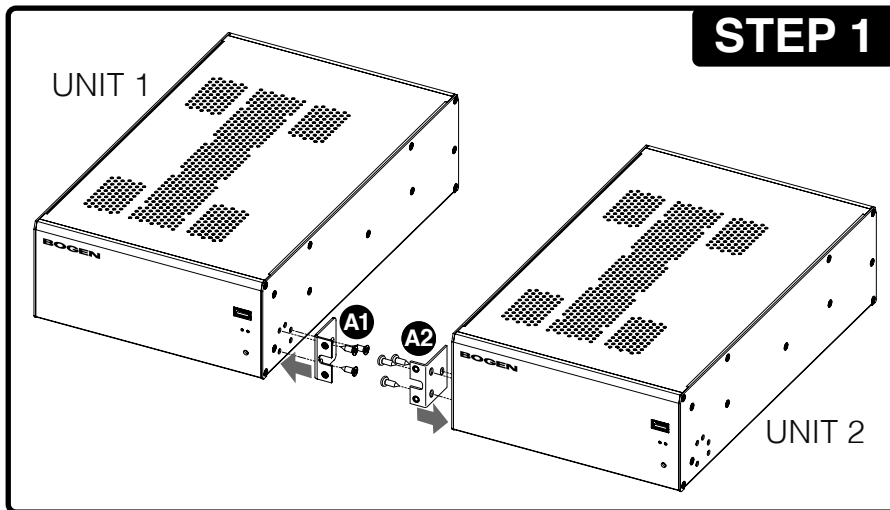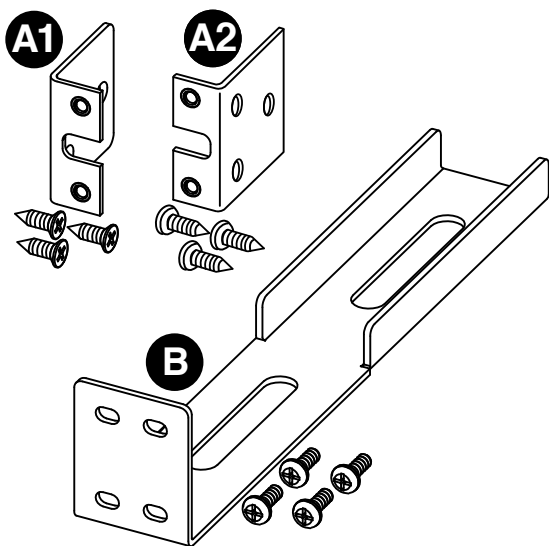

**STEP 1**

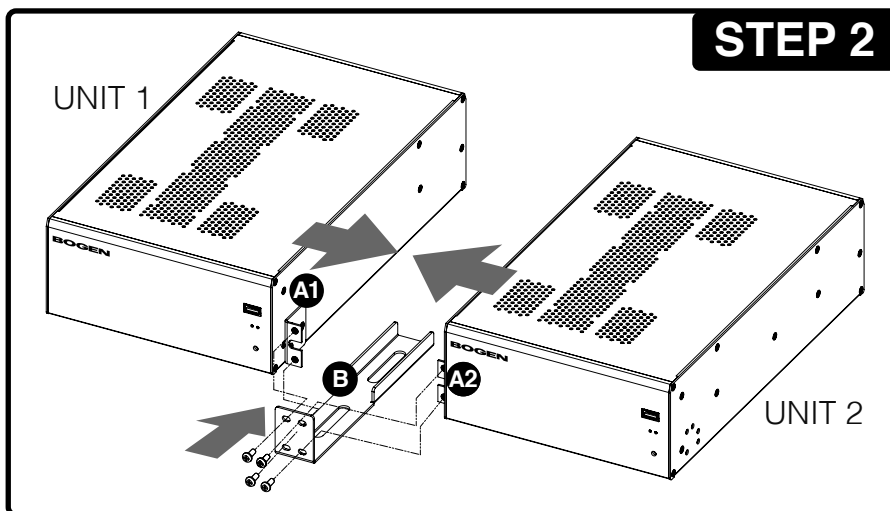


**STEP 2**

**STEP 1:** Attach Left Side Bracket (**A1**) to side of UNIT 1 using three M3 sheet metal screws. Attach Right Side Bracket (**A2**) to side of UNIT 2 using three M3 sheet metal screws.

**STEP 2:** Bringing both units together, position Support Bracket (**B**) between both units and secure using four M4 machine screws into the Left (**A1**) and Right (**A2**) Side Brackets.

**FINAL:** Both units shown properly installed as a completed Joining Bracket assembly. **CAUTION-** Joining Bracket assembly must be installed as shown.

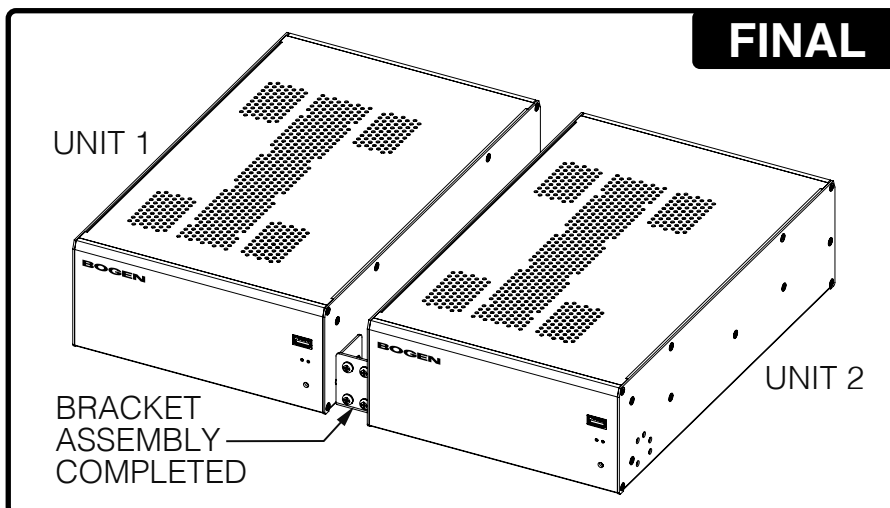

**FINAL**

**BOGEN®**  
COMMUNICATIONS, INC.  
[www.bogen.com](http://www.bogen.com)

Specifications are subject to change.  
©2018 Bogen Communications, Inc.  
740-00058A 1806